


- Insert the SIM card into the SIM slot located behind the battery cover. The SIM slot is below the PSAM1 slot. The battery must be moved aside in order to insert the SIM.
- 2. Power on the N5 device.
- 3. From the launcher screen, select Settings


<u>Note</u>: It is possible for the *Settings* menu to be password protected. If this is the case, you will need to contact the terminal provider to retrieve the password.



4. From the Settings menu, select More

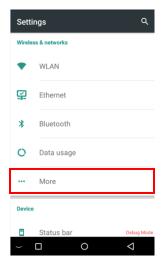


5. From the More menu select Cellular networks

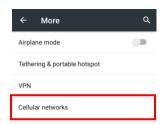



6. From the *Cellular networks* menu select *Access Point Names*

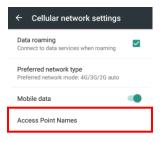



Rev. 1/0418

© 2018 ExaDigm, Inc.




7. Select the add button \bigoplus in the top right of the menu







8. Select *Name* and input an access point name and click OK

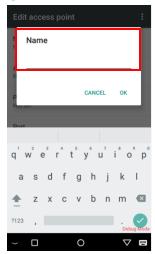

9. Select and input the APN for the SIM and click OK

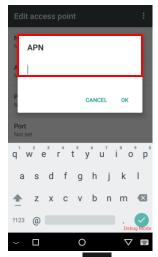

10. Select the drop down, and click Save to complete the setup.

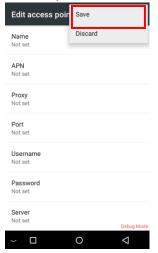



11. Select the newly added APN from the APN list.





© 2018 ExaDigm, Inc. Rev. 1/0418